

Dell Vostro 3591 (Without optical drive)

Setup and specifications guide



Notes, cautions, and warnings

 **NOTE:** A NOTE indicates important information that helps you make better use of your product.

 **CAUTION:** A CAUTION indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **WARNING:** A WARNING indicates a potential for property damage, personal injury, or death.

© 2020 Dell Inc. or its subsidiaries. All rights reserved. Dell, EMC, and other trademarks are trademarks of Dell Inc. or its subsidiaries. Other trademarks may be trademarks of their respective owners.

Contents

1 Set up your computer	5
2 Create a USB recovery drive for Windows	6
3 Chassis overview	7
Display view.....	7
Left view.....	8
Right view.....	8
Palmrest view.....	9
Bottom view.....	10
4 Keyboard shortcuts	11
5 System specifications	12
Processors.....	12
Chipset.....	13
Operating system.....	13
Memory.....	13
Storage.....	13
Ports and connectors.....	14
Audio.....	14
Video.....	15
Camera.....	15
Keyboard.....	15
Communications.....	16
Media-card reader.....	16
Power adapter.....	16
Battery.....	17
Display.....	17
Dimensions and weight.....	18
Fingerprint reader.....	18
Security.....	19
Data security.....	19
6 System setup	20
Boot menu.....	20
Navigation keys.....	20
System setup options.....	21
General options.....	21
System information.....	21
Video.....	22
Security.....	22
Secure boot.....	23
Intel Software Guard Extensions.....	24

Performance.....	24
Power management.....	25
POST behavior.....	26
Virtualization support.....	27
Wireless.....	27
Maintenance screen.....	27
System logs.....	28
SupportAssist System Resolution.....	28
System and setup password.....	28
Assigning a system setup password.....	28
Deleting or changing an existing system setup password.....	29
7 Software.....	30
Downloading drivers.....	30
8 Getting help.....	31
Contacting Dell.....	31

Set up your computer

Steps

1. Connect the power adapter and press the power button.

 **NOTE: To conserve battery power, the battery might enter power saving mode.**

2. Finish Windows system setup.

Follow the on-screen instructions to complete the setup. When setting up, Dell recommends that you:







- Connect to a network for Windows updates.

 **NOTE: If connecting to a secured wireless network, enter the password for the wireless network access when prompted.**

- If connected to the internet, sign-in with or create a Microsoft account. If not connected to the internet, create an offline account.
- On the **Support and Protection** screen, enter your contact details.

3. Locate and use Dell apps from the Windows Start menu—Recommended

Table 1. Locate Dell apps

Dell apps	Details
	<p>Dell Product Registration</p> <p>Register your computer with Dell.</p>
	<p>Dell Help & Support</p> <p>Access help and support for your computer.</p>
	<p>SupportAssist</p> <p>Proactively checks the health of your computer's hardware and software.</p> <p> NOTE: Renew or upgrade your warranty by clicking the warranty expiry date in SupportAssist.</p>
	<p>Dell Update</p> <p>Updates your computer with critical fixes and important device drivers as they become available.</p>
	<p>Dell Digital Delivery</p> <p>Download software applications including software that is purchased but not pre-installed on your computer.</p>

4. Create recovery drive for Windows.

 **NOTE: It is recommended to create a recovery drive to troubleshoot and fix problems that may occur with Windows.**

For more information, see [Create a USB recovery drive for Windows](#).

Create a USB recovery drive for Windows

Create a recovery drive to troubleshoot and fix problems that may occur with Windows. An empty USB flash drive with a minimum capacity of 16 GB is required to create the recovery drive.

Prerequisites

NOTE: This process may take up to an hour to complete.


NOTE: The following steps may vary depending on the version of Windows installed. Refer to the [Microsoft support site](#) for latest instructions.

Steps

1. Connect the USB flash drive to your computer.
2. In Windows search, type `Recovery`.
3. In the search results, click **Create a recovery drive**.
The **User Account Control** window is displayed.
4. Click **Yes** to continue.
The **Recovery Drive** window is displayed.
5. Select **Back up system files to the recovery drive** and click **Next**.
6. Select the **USB flash drive** and click **Next**.
A message appears, indicating that all data in the USB flash drive will be deleted.
7. Click **Create**.
8. Click **Finish**.
For more information about reinstalling Windows using the USB recovery drive, see the *Troubleshooting* section of your product's *Service Manual* at www.dell.com/support/manuals.

Chassis overview


Display view

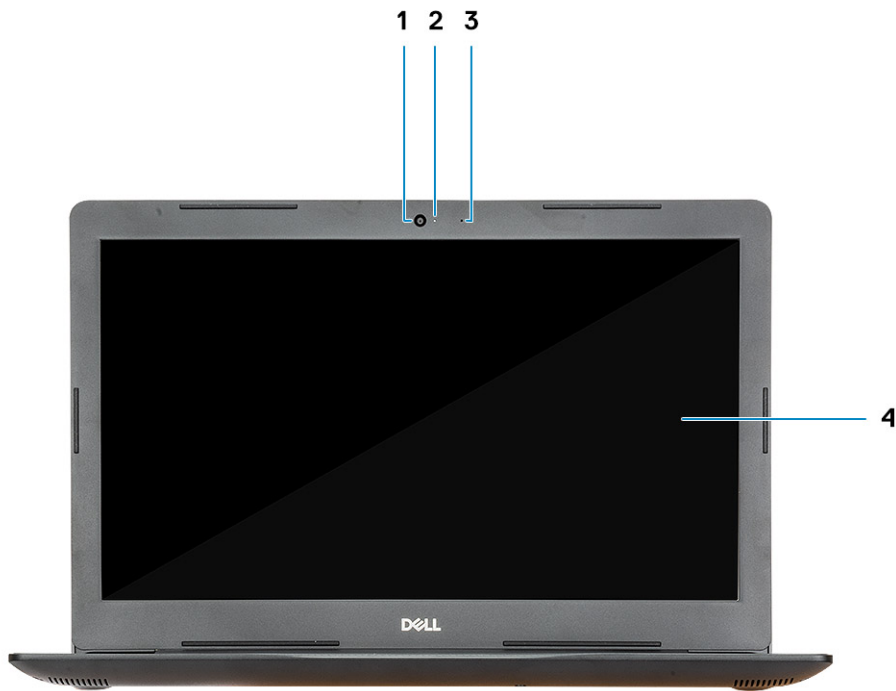

1. Camera
3. Microphone

2. Camera-status light
4. Display

Left view

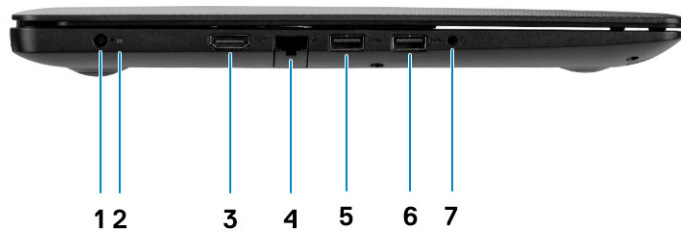

1. Power adapter port
3. HDMI port
5. USB 3.1 Gen 1 port
7. Headset port

2. Battery status light
4. Network port
6. USB 3.1 Gen 1 port

Right view




1. SD card reader
2. USB 2.0 port
3. Security-cable slot (for Noble locks)

Palmrest view



1. Power button
2. Keyboard
3. Touchpad

Bottom view

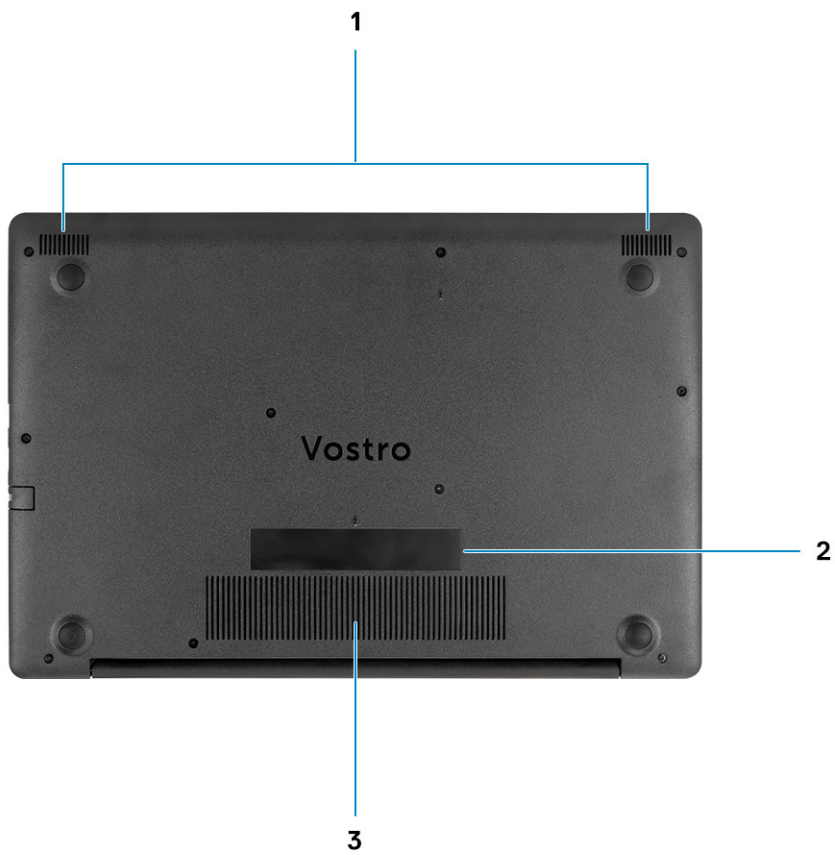

1. Speakers
2. Service Tag label
3. Air vent

Keyboard shortcuts


 **NOTE:** Keyboard characters may differ depending on the keyboard language configuration. Keys used for shortcuts remain the same across all language configurations.

Table 2. List of keyboard shortcuts

Keys	Description
Fn + Esc	Toggle Fn-key lock
Fn + F1	Mute audio
Fn + F2	Decrease volume
Fn + F3	Increase volume
Fn + F4	Play previous
Fn + F5	Play / Pause
Fn + F6	Play next
Fn + F8	Switch to external display
Fn + F9	Search
Fn + F11	Decrease brightness
Fn + F12	Increase brightness
Fn + PrtScr	Turn on/off wireless
Fn + Ctrl	Open application menu

System specifications

NOTE: Offerings may vary by region. The following specifications are only those required by law to ship with your computer. For more information about the configuration of your computer, go to Help and Support in your Windows operating system and select the option to view information about your computer.

Topics:

- [Processors](#)
- [Chipset](#)
- [Operating system](#)
- [Memory](#)
- [Storage](#)
- [Ports and connectors](#)
- [Audio](#)
- [Video](#)
- [Camera](#)
- [Keyboard](#)
- [Communications](#)
- [Media-card reader](#)
- [Power adapter](#)
- [Battery](#)
- [Display](#)
- [Dimensions and weight](#)
- [Fingerprint reader](#)
- [Security](#)
- [Data security](#)

Processors

Table 3. Processors

Description	Values	
Processors	10th Generation Intel Core i5 Ice Lake	10th Generation Intel Core i7 Ice Lake
Wattage	15 W	15 W
Core count	4	4
Thread count	8	8
Speed	Up to 3.6 GHz	Up to 3.8 GHz
Cache	6 MB	8 MB
Integrated graphics	Intel® UHD Graphics	Intel® Iris® Plus Graphics

Chipset

Table 4. Chipset

Description	Values
Chipset	Ice Lake U (ICL U) PCH-LP
Processor	<ul style="list-style-type: none">• i5-1035G1• i7-1065G7
DRAM bus width	64-bit
Flash EPROM	16 + 8 MB
PCIe bus	Up to Gen 3.0

Operating system

- Windows 10 Home (64-bit)
- Windows 10 Professional (64-bit)
- Ubuntu 18.04 LTS

Memory

Table 5. Memory specifications

Description	Values
Slots	Two So-DIMM slots
Type	DDR4
Speed	2666 MHz, 3200 MHz (For Discrete SKU with NVIDIA Gfx only)
Maximum memory	16 GB
Minimum memory	4 GB
Configurations supported	<ul style="list-style-type: none">• 4 GB• 4 GB + 4 GB• 8 GB• 4 GB + 8 GB• 8 GB + 8 GB• 16 GB

Storage

Your computer supports one of the following configurations: The primary drive of your computer varies with the storage configuration. For computers:

Table 6. Storage specifications

Form factor	Interface type	Capacity
2.5-inch 5400rpm hard disk drive	SATA	Upto 2 TB
2.5-inch 7200rpm hard disk drive	SATA	Upto 1 TB

Form factor	Interface type	Capacity
M.2 2230 Solid State Drive	PCIe NVMe 3x4	<ul style="list-style-type: none"> Class 35: 128 GB, 256 GB, 512 GB Class 40: 512 GB

Ports and connectors

Table 7. External ports and connectors

Description	Values
External:	
Network	One RJ-45 Port 10/100/1000
USB	<ul style="list-style-type: none"> 2 USB 3.0 Type 1 USB 2.0 Type A
Audio	1 Universal Audio Jack
Video	HDMI
Power adapter port	4.50 mm x 2.90 mm DC-in
Security	Wedge-shaped lock slot
Card slot	SD card slot

Table 8. Internal ports and connectors

Description	Values
Internal:	
One M.2 Key-M (2280 or 2230) for solid-state drive	<ul style="list-style-type: none"> Class 35 128GB, 256GB
One M.2 2230 Key-E for WLAN	<ul style="list-style-type: none"> Class 35 512GB Class 40 512GB

NOTE: To learn more about the features of different types of M.2 cards, see the knowledge base article [SLN301626](#).

Audio

Table 9. Audio specifications

Description	Values
Controller	Realtek ALC3204
Stereo conversion	Supported
Internal interface	High-definition audio
External interface	Universal Audio Jack
Speakers	Two
Speaker Output Average	2 W
Speaker Output Peak	2.5 W

Video

Table 10. Discrete graphics specifications

Discrete graphics

Controller	External display support	Memory size	Memory type
NVIDIA MX230	One HDMI port	2 GB	GDDR5

Table 11. Integrated graphics specifications

Integrated graphics

Controller	External display support	Memory size	Processor
<ul style="list-style-type: none">Intel® UHD Graphics GT2Intel® Iris® Plus Graphics	One HDMI port	Shared system memory	<ul style="list-style-type: none">i5-1035G1i7-1065G7

Camera

Table 12. Camera specifications

Description	Values
Number of cameras	One
Type	RGB HD Camera
Location	Front
Sensor type	CMOS sensor technology
Camera	
Still image	0.92 megapixel
Video	1280 x 720 (HD) at 30 fps
Diagonal viewing angle	
Camera	78.6 °

Keyboard

Table 13. Keyboard specifications

Description	Values
Type	<ul style="list-style-type: none">Non Backlit Keyboard, EnglishStandard full size spill-resistant keyboardMulti-touch gesture-enabled precision touchpad with integrated scrolling
Layout	QWERTY
Number of keys	<ul style="list-style-type: none">United States and Canada: 80 keysUnited Kingdom: 81 keysJapan: 84 keys
Size	X=19.05 mm key pitch Y=18.05 mm key pitch

Description	Values
Shortcut keys	Some keys on your keyboard have two symbols on them. These keys can be used to type alternate characters or to perform secondary functions. To type the alternate character, press Shift and the desired key. To perform secondary functions, press Fn and the desired key.

Communications

Wireless module

Table 14. Wireless module specifications

Description	Values			
Model number	Qualcomm QCA9377 (DW1810)	Qualcomm DW1820	Intel 9462ac	Intel 9560
Transfer rate	Up to 433 Mbps	Up to 867 Mbps	Up to 433 Mbps	Up to 1.73 Gbps
Frequency bands supported	2.4 GHz /5 GHz	2.4 GHz/ 5 GHz	2.4 GHz/5 GHz	2.4 GHz /5 GHz
Wireless standards	<ul style="list-style-type: none"> Wi-Fi 802.11/g/a/n/ac 	<ul style="list-style-type: none"> Wi-Fi 802.11b/g/a/n/ac 	<ul style="list-style-type: none"> Wi-Fi 802.11b/g/a/n/ac 	<ul style="list-style-type: none"> Wi-Fi 802.11b/g/a/n/ac
Encryption	<ul style="list-style-type: none"> 64/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64/128-bit WEP AES-CCMP TKIP 	<ul style="list-style-type: none"> 64/128-bit WEP AES-CCMP TKIP
Bluetooth	Bluetooth 4.2	Bluetooth 4.2	Bluetooth 5 (Windows 10 supports Bluetooth 5 with the latest Windows update)	Bluetooth 5 (Windows 10 supports Bluetooth 5 with the latest Windows update)

Media-card reader

Table 15. Media-card reader specifications

Description	Values
Type	SD Card reader
Cards supported	Secure Digital (SD)

Power adapter

Table 16. Power adapter specifications

Description	Values	
Type	65 W	45 W
Input voltage	100 VAC x 240 VAC	100 VAC x 240 VAC
Input frequency	50 Hz/60 Hz	50 Hz/60 Hz
Input current (maximum)	1.50 A	1.30 A

Description	Values	
Output current (continuous)	3.34 A	2.31 A
Rated output voltage	19.50 VDC	19.50 VDC
Temperature range:		
Operating	0°C to 40°C (32°F to 104°F)	0°C to 40°C (0°F to 104°F)
Storage	-40°C to 70°C (-40°F to 158°F)	-40°C to 70°C (-40°F to 158°F)

Battery

Table 17. Battery specifications

Description	Values
Type	Polymer battery, 3 cell 42WHr
Voltage	11.40 VDC
Weight (maximum)	0.2 kg (0.44 lb)
Dimensions:	
Height	184.15 mm (7.25 in.)
Width	97.15 mm (3.82 in.)
Depth	5.90 mm (0.23 in.)
Temperature range:	
Operating	0°C (32°F) to 35°C (95°F)
Storage	-40°C (-40°F) to 65°C (149°F)
Operating time	Varies depending on operating conditions and can reduce under certain power-intensive conditions
Charging time (approximate)	3 hours (when the computer is off)
Life span (approximate)	300 discharge/charge cycles
Coin-cell battery	CR 2032
Operating time	Varies depending on operating conditions and can reduce under certain power-intensive conditions

Display

Table 18. Display specifications

Description	Values
Type	High Definition - Non-Touch, Anti Glare, Ultra slim
Panel technology	Twisted Nematic
Luminance (typical)	220 nits
Dimensions (active area):	
Height	309.35 mm (12.18 in.)

Description	Values
Width	173.99 mm (6.85 in.)
Diagonal	355.60 mm (14.00 in.)
Native resolution	1366x768
Megapixels	1.049
Pixels Per Inch (PPI)	112 PPI
Contrast ratio (min)	0.672916666666667
Response time (max)	16 ms
Refresh rate	60 Hz
Horizontal view angle	40°
Vertical view angle	Top/Bottom: 10°/30°
Pixel pitch	0.2265 mm x 0.2265 mm
Power consumption (maximum)	2.9 W
Anti-glare vs glossy finish	Anti-glare
Touch options	No

Dimensions and weight

Table 19. Dimensions and weight

Description	Values
Height:	
Front	19.9 mm (0.78 in.)
Rear	19.90 mm (0.78 in.)
Width	380 mm (14.96 in.)
Depth	258 mm (10.16 in.)
Weight	1.99 kg (4.41 lb)

NOTE: The weight of your tablet depends on the configuration ordered and the manufacturing variability.

Fingerprint reader

Table 20. Fingerprint reader specifications

Description	Values
Sensor technology	Capacitive
Sensor resolution	500 dpi
Sensor area	5.5 mm x 4.4 mm

Description	Values
Sensor pixel size	108 x 88

Security

Table 21. Security

Features	Specifications
Trusted Platform Module (TPM) 2.0	Integrated on system board
Fingerprint reader	Optional
Contacted Smartcard reader	Optional
Contactless Smartcard reader	Optional
Kensington security lock slot	Standard
Protected slot/vent openings	Standard

Data security

Table 22. Data security

Features	Specifications
Dell Data Protection - Endpoint Security Suite Enterprise (DDP ESSE)	Optional
Dell Data Protection - Software Encryption (DDPE)	Optional
Dell ControlVault 3.0	Optional
Microsoft Device Guard and Credential Guard (Windows Enterprise)	Optional
Microsoft Windows Bitlocker	Optional

System setup

System setup enables you to manage your hardware and specify BIOS level options. From the System setup, you can:

- Change the NVRAM settings after you add or remove hardware
- View the system hardware configuration
- Enable or disable integrated devices
- Set performance and power management thresholds
- Manage your computer security

Topics:

- [Boot menu](#)
- [Navigation keys](#)
- [System setup options](#)
- [System and setup password](#)

Boot menu

Press <F12> when the Dell logo appears to initiate a one-time boot menu with a list of the valid boot devices for the system. Diagnostics and BIOS Setup options are also included in this menu. The devices listed on the boot menu depend on the bootable devices in the system. This menu is useful when you are attempting to boot to a particular device or to bring up the diagnostics for the system. Using the boot menu does not make any changes to the boot order stored in the BIOS.

The options are:

- UEFI Boot:
 - Windows Boot Manager
- Other Options:
 - BIOS Setup
 - BIOS Flash Update
 - Diagnostics
 - Change Boot Mode Settings

Navigation keys

 **NOTE:** For most of the System Setup options, changes that you make are recorded but do not take effect until you restart the system.

Keys	Navigation
Up arrow	Moves to the previous field.
Down arrow	Moves to the next field.
Enter	Selects a value in the selected field (if applicable) or follow the link in the field.
Spacebar	Expands or collapses a drop-down list, if applicable.
Tab	Moves to the next focus area.
Esc	Moves to the previous page until you view the main screen. Pressing Esc in the main screen displays a message that prompts you to save any unsaved changes and restarts the system.

System setup options

NOTE: Depending on the and its installed devices, the items listed in this section may or may not appear.

General options

Table 23. General

Option	Description
System Information	Displays the following information: <ul style="list-style-type: none">System Information: Displays BIOS Version, Service Tag, Asset Tag, Ownership Tag, Ownership Date, Manufacture Date, and the Express Service Code.Memory Information: Displays Memory Installed, Memory Available, Memory Speed, Memory Channel Mode, Memory Technology, DIMM A size, and DIMM B sizeProcessor Information: Displays Processor Type, Core Count, Processor ID, Current Clock Speed, Minimum Clock Speed, Maximum Clock Speed, Processor L2 Cache, Processor L3 Cache, HT Capable, and 64-Bit Technology.Device Information: Displays Primary HDD, ODD Device, M.2 SATA SSD, M.2 PCIe SSD-0, LOM MAC Address, Video Controller, Video BIOS Version, Video Memory, Panel type, Native Resolution, Audio Controller, Wi-Fi Device, and Bluetooth Device.
Battery Information	Displays the battery status health and whether the AC adapter is installed.
Boot Sequence	Allows you to specify the order in which the computer attempts to find an operating system from the devices specified in this list.
Advanced Boot Options	Allows you to select the Legacy Option ROMs option, when in UEFI boot mode. By default, no option is selected. <ul style="list-style-type: none">Enable Legacy Option ROMsEnable Attempt Legacy Boot
UEFI Boot Path Security	This option controls whether or not the system will prompt the user to enter the Admin password when booting a UEFI boot path from the F12 Boot Menu. <ul style="list-style-type: none">Always, Except Internal HDD—DefaultAlwaysNever
Date/Time	Allows you to set the date and time settings. Changes to the system date and time take effect immediately.

System information

Table 24. System Configuration

Option	Description
Integrated NIC	Allows you to configure the on-board LAN controller. <ul style="list-style-type: none">Disabled = The internal LAN is off and not visible to the operating system.Enabled = The internal LAN is enabled.Enabled w/PXE = The internal LAN is enabled (with PXE boot) (selected by default)
SATA Operation	Allows you to configure the operating mode of the integrated hard drive controller. <ul style="list-style-type: none">Disabled = The SATA controllers are hiddenAHCI = SATA is configured for AHCI modeRAID ON = SATA is configured to support RAID mode (selected by default)

Option	Description
Drives	Allows you to enable or disable the various drives on-board: <ul style="list-style-type: none"> • SATA-0 (enabled by default) • SATA-1 (enabled by default) • SATA-2 (enabled by default) • M.2 PCIe SSD-0 (enabled by default)
Smart Reporting	This field controls whether hard drive errors for integrated drives are reported during system startup. The Enable Smart Reporting option is disabled by default.
USB Configuration	Allows you to enable or disable the integrated USB controller for: <ul style="list-style-type: none"> • Enable USB Boot Support • Enable External USB Port <p>All the options are enabled by default.</p>
Audio	Allows you to enable or disable the integrated audio controller. The option Enable Audio is selected by default. <ul style="list-style-type: none"> • Enable Microphone • Enable Internal Speaker <p>Both the options are selected by default.</p>
Miscellaneous Devices	Allows you to enable or disable the following devices: <ul style="list-style-type: none"> • Enable Camera (enabled by default)


Video

Option	Description
LCD Brightness	Allows you to set the display brightness depending up on the power source—On Battery and On AC. The LCD brightness is independent for battery and AC adapter. It can be set using the slider.

 **NOTE:** The video setting is visible only when a video card is installed into the system.

Security

Table 25. Security

Option	Description
Admin Password	Allows you to set, change, and delete the admin password.
System Password	Allows you to set, change, and delete the system password.
Strong Password	This option lets you enable or disable strong passwords for the system.
Password Configuration	Allows you to control the minimum and maximum number of characters allowed for a administrative password and the system password. The range of characters is between 4 and 32.
Password Bypass	This option lets you bypass the System (Boot) Password and the internal HDD password prompts during a system restart. <ul style="list-style-type: none"> • Disabled — Always prompt for the system and internal HDD password when they are set. This option is enabled by default. • Reboot Bypass — Bypass the password prompts on Restarts (warm boots). <p> NOTE: The system will always prompt for the system and internal HDD passwords when powered on from the off state (a cold boot). Also, the system will always prompt for passwords on any module bay HDDs that may be present.</p>
Password Change	This option lets you determine whether changes to the System and Hard Disk passwords are permitted when an administrator password is set.

Option	Description
	Allow Non-Admin Password Changes - This option is enabled by default.
Non-Admin Setup Changes	Determines whether changes to the setup option are permitted when an administrator password is set.
UEFI Capsule Firmware Updates	This option controls whether this system allows BIOS updates via UEFI capsule update packages. This option is selected by default. Disabling this option will block BIOS updates from services such as Microsoft Windows Update and Linux Vendor Firmware Service (LVFS)
TPM 2.0 Security	Allows you to control whether the Trusted Platform Module (TPM) is visible to the operating system. <ul style="list-style-type: none"> TPM On (default) Clear PPI Bypass for Enable Commands PPI Bypass for Disable Commands PPI Bypass for Clear Commands Attestation Enable (default) Key Storage Enable (default) SHA-256 (default) Choose any one option: <ul style="list-style-type: none"> Disabled Enabled (default)
Computrace(R)	This field lets you Activate or Disable the BIOS module interface of the optional Computrace Service from Absolute Software. Enables or disables the optional Computrace service designed for asset management. <ul style="list-style-type: none"> Deactivate Disable Activate - This option is selected by default.
OROM Keyboard Access	This option determines whether users are able to enter Option ROM configuration screen via hotkeys during boot. <ul style="list-style-type: none"> Enabled (default) Disabled One Time Enable
Admin Setup Lockout	Allows you to prevent users from entering Setup when Admin password is set. This option is not set by default.
Master Password Lockout	Allows you to disable master password support Hard Disk passwords need to be cleared before the settings can be changed. This option is not set by default.
SMM Security Mitigation	Allows you to enable or disable additional UEFI SMM Security Mitigation protections. This option is not set by default.

Secure boot

Table 26. Secure Boot

Option	Description
Secure Boot Enable	Allows you to enable or disable Secure Boot feature <ul style="list-style-type: none"> Secure Boot Enable This option is selected by default.
Secure Boot Mode	Allows you to modify the behavior of Secure Boot to allow evaluation or enforcement of UEFI driver signatures. <ul style="list-style-type: none"> Deployed Mode (default)

Option	Description
Expert key Management	<ul style="list-style-type: none"> · Audit Mode <p>Allows you to manipulate the security key databases only if the system is in Custom Mode. The Enable Custom Mode option is disabled by default. The options are:</p> <ul style="list-style-type: none"> · PK (default) · KEK · db · dbx <p>If you enable the Custom Mode, the relevant options for PK, KEK, db, and dbx appear. The options are:</p> <ul style="list-style-type: none"> · Save to File- Saves the key to a user-selected file · Replace from File- Replaces the current key with a key from a user-selected file · Append from File- Adds a key to the current database from a user-selected file · Delete- Deletes the selected key · Reset All Keys- Resets to default setting · Delete All Keys- Deletes all the keys <p>NOTE: If you disable the Custom Mode, all the changes made will be erased and the keys will restore to default settings.</p>

Intel Software Guard Extensions

Table 27. Intel Software Guard Extensions

Option	Description
Intel SGX Enable	<p>This field specifies you to provide a secured environment for running code/storing sensitive information in the context of the main OS.</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> · Disabled · Enabled · Software controlled—Default
Enclave Memory Size	<p>This option sets SGX Enclave Reserve Memory Size</p> <p>Click one of the following options:</p> <ul style="list-style-type: none"> · 32 MB · 64 MB · 128 MB—Default

Performance


Table 28. Performance

Option	Description
Multi Core Support	<p>This field specifies whether the process has one or all cores enabled. The performance of some applications improves with the additional cores.</p> <ul style="list-style-type: none"> · All—Default · 1
Intel SpeedStep	<p>Allows you to enable or disable the Intel SpeedStep mode of processor.</p>

Option	Description
	<ul style="list-style-type: none"> • Enable Intel SpeedStep <p>This option is set by default.</p>
C-States Control	<p>Allows you to enable or disable the additional processor sleep states.</p> <ul style="list-style-type: none"> • C states <p>This option is set by default.</p>
Intel TurboBoost	<p>Allows you to enable or disable the Intel TurboBoost mode of the processor.</p> <ul style="list-style-type: none"> • Enable Intel TurboBoost <p>This option is set by default.</p>
Hyper-Thread Control	<p>Allows you to enable or disable the HyperThreading in the processor.</p> <ul style="list-style-type: none"> • Disabled • Enabled—Default

Power management

Option	Description
AC Behavior	<p>Allows you to enable or disable the computer from turning on automatically when an AC adapter is connected.</p> <p>Default setting: Wake on AC is not selected.</p>
Enable Intel Speed Shift Technology	<ul style="list-style-type: none"> • Enable Intel Speed Shift Technology <p>Default setting: Enabled</p>
Auto On Time	<p>Allows you to set the time at which the computer must turn on automatically. The options are:</p> <ul style="list-style-type: none"> • Disabled • Every Day • Weekdays • Select Days <p>Default setting: Disabled</p>
USB Wake Support	<p>Allows you to enable USB devices to wake the system from Standby.</p> <p>NOTE: This feature is only functional when the AC power adapter is connected. If the AC power adapter is removed during Standby, the system setup removes power from all the USB ports to conserve battery power.</p> <ul style="list-style-type: none"> • Enable USB Wake Support
Wake on WLAN	<p>Allows you to enable or disable the feature that powers on the computer from the Off state when triggered by a LAN signal.</p> <ul style="list-style-type: none"> • Disabled • WLAN <p>Default setting: Disabled</p>
Peak Shift	<p>This option enables you to minimize the AC power consumption during the peak power times of day. After you enable this option, your system runs only in battery even if the AC is attached.</p> <ul style="list-style-type: none"> • Enable peak shift—is disabled • Set battery threshold (15% to 100%) - 15 % (enabled by default)

Option	Description
Advanced Battery Charge Configuration	This option enables you to maximize the battery health. By enabling this option, your system uses the standard charging algorithm and other techniques, during the non work hours to improve the battery health. Enable Advanced Battery Charge Mode- is disabled
Primary Battery Charge Configuration	Allows you to select the charging mode for the battery. The options are: <ul style="list-style-type: none"> Adaptive—enabled by default Standard—Fully charges your battery at a standard rate. ExpressCharge—The battery charges over a shorter time using Dell's fast charging technology. Primarily AC use Custom <p>If Custom Charge is selected, you can also configure Custom Charge Start and Custom Charge Stop.</p> <p> NOTE: All charging mode may not be available for all the batteries. To enable this option, disable the Advanced Battery Charge Configuration option.</p>


POST behavior

Option	Description
Adapter Warnings	Allows you to enable or disable the system setup (BIOS) warning messages when you use certain power adapters. Default setting: Enable Adapter Warnings
Numlock Enable	Allows you to enable the Numlock option when the computer boots. Enable Network. This option is enabled by default.
Fn Lock Options	Allows you to let hot key combinations Fn + Esc toggle the primary behavior of F1–F12, between their standard and secondary functions. If you disable this option, you cannot toggle dynamically the primary behavior of these keys. The available options are: <ul style="list-style-type: none"> Fn Lock—enabled by default Lock Mode Disable/Standard—enabled by default Lock Mode Enable/Secondary
Fastboot	Allows you to speed up the boot process by bypassing some of the compatibility steps. The options are: <ul style="list-style-type: none"> Minimal—enabled by default Thorough Auto
Extended BIOS POST Time	Allows you to create an extra preboot delay. The options are: <ul style="list-style-type: none"> 0 seconds—enabled by default. 5 seconds 10 seconds
Full Screen Log	<ul style="list-style-type: none"> Enable Full Screen Logo—not enabled
Warnings and errors	<ul style="list-style-type: none"> Prompt on warnings and errors—enabled by default Continue on warnings Continue on warnings and errors
Sign of Life Indication	<ul style="list-style-type: none"> Enable Sign of Life Keyboard Backlight Indication—enabled by default

Virtualization support

Option	Description
Virtualization	This field specifies whether a virtual Machine Monitor (VMM) can utilize the conditional hardware capabilities provided by Intel Virtualization Technology. Enable Intel Virtualization Technology—enabled by default.
VT for Direct I/O	Enables or disables the Virtual Machine Monitor (VMM) from utilizing the additional hardware capabilities provided by Intel® Virtualization technology for direct I/O. Enable VT for Direct I/O - enabled by default.
Trusted Execution	This option specifies whether a Measured Virtual Machine Monitor (MVMM) can utilize the additional hardware capabilities provided by Intel Trusted Execution Technology. The TPM Virtualization Technology, and the Virtualization technology for direct I/O must be enabled to use this feature. Trusted Execution - disabled by default.

Wireless

Option	Description
Wireless Switch	Allows to set the wireless devices that can be controlled by the wireless switch. The options are: <ul style="list-style-type: none">· WLAN· Bluetooth All the options are enabled by default.  NOTE: For WLAN enable or disable controls are tied together and they cannot be enabled or disabled independently.
Wireless Device Enable	Allows you to enable or disable the internal wireless devices. <ul style="list-style-type: none">· WLAN· Bluetooth All the options are enabled by default.

Maintenance screen

Option	Description
Service Tag	Displays the Service Tag of your computer.
Asset Tag	Allows you to create a system asset tag if an asset tag is not already set. This option is not set by default.
BIOS Downgrade	This controls flashing of the system firmware to previous revisions. Option 'Allow BIOS downgrade' is enabled by default.
Data Wipe	This field allows users to erase the data securely from all internal storage devices. Option 'Wipe on Next boot' is not enabled by default. The following is list of devices affected: <ul style="list-style-type: none">· Internal SATA HDD/SSD· Internal M.2 SATA SDD· Internal M.2 PCIe SSD· Internal eMMC
BIOS Recovery	This field allows you to recover from certain corrupted BIOS conditions from a recover file on the user primary hard drive or an external USB key. <ul style="list-style-type: none">· BIOS Recovery from Hard Drive—enabled by default· Always perform integrity check—disabled by default

System logs

Option	Description
BIOS Events	Allows you to view and clear the System Setup (BIOS) POST events.
Thermal Events	Allows you to view and clear the System Setup (Thermal) events.
Power Events	Allows you to view and clear the System Setup (Power) events.

SupportAssist System Resolution

Option	Description
Auto OS Recovery Threshold	Allows you to control the automatic boot flow for SupportAssist System. Options are: <ul style="list-style-type: none">· Off· 1· 2 (Enabled by default)· 3
SupportAssist OS Recovery	Allows you to recover the SupportAssist OS Recovery (Disabled by default)


System and setup password

Table 29. System and setup password

Password type	Description
System password	Password that you must enter to log on to your system.
Setup password	Password that you must enter to access and make changes to the BIOS settings of your computer.

You can create a system password and a setup password to secure your computer.

 **CAUTION:** The password features provide a basic level of security for the data on your computer.

 **CAUTION:** Anyone can access the data stored on your computer if it is not locked and left unattended.

 **NOTE:** System and setup password feature is disabled.

Assigning a system setup password

Prerequisites

You can assign a new **System or Admin Password** only when the status is in **Not Set**.

About this task

To enter the system setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **Security** and press **Enter**. The **Security** screen is displayed.
2. Select **System/Admin Password** and create a password in the **Enter the new password** field. Use the following guidelines to assign the system password:

- A password can have up to 32 characters.
 - The password can contain the numbers 0 through 9.
 - Only lower case letters are valid, upper case letters are not allowed.
 - Only the following special characters are allowed: space, ("), (+), (.), (-), (.), (/), (;), ([), (\), (]), (`).
3. Type the system password that you entered earlier in the **Confirm new password** field and click **OK**.
 4. Press Esc and a message prompts you to save the changes.
 5. Press Y to save the changes.
The computer reboots.

Deleting or changing an existing system setup password


Prerequisites

Ensure that the **Password Status** is Unlocked (in the System Setup) before attempting to delete or change the existing System and Setup password. You cannot delete or change an existing System or Setup password, if the **Password Status** is Locked.

About this task

To enter the System Setup, press F2 immediately after a power-on or reboot.

Steps

1. In the **System BIOS** or **System Setup** screen, select **System Security** and press **Enter**.
The **System Security** screen is displayed.
2. In the **System Security** screen, verify that **Password Status** is **Unlocked**.
3. Select **System Password**, alter or delete the existing system password and press **Enter** or Tab.
4. Select **Setup Password**, alter or delete the existing setup password and press **Enter** or Tab.
 **NOTE: If you change the System and/or Setup password, re enter the new password when prompted. If you delete the System and Setup password, confirm the deletion when prompted.**
5. Press Esc and a message prompts you to save the changes.
6. Press Y to save the changes and exit from System Setup.
The computer restarts.

Software


This chapter details the supported operating systems along with instructions on how to install the drivers.

Topics:

- [Downloading drivers](#)

Downloading drivers

Steps

1. Turn on the .
2. Go to **Dell.com/support**.
3. Click **Product Support**, enter the Service Tag of your , and then click **Submit**.
 **NOTE: If you do not have the Service Tag, use the auto detect feature or manually browse for your model.**
4. Click **Drivers and Downloads**.
5. Select the operating system installed on your .
6. Scroll down the page and select the driver to install.
7. Click **Download File** to download the driver for your .
8. After the download is complete, navigate to the folder where you saved the driver file.
9. Double-click the driver file icon and follow the instructions on the screen.


Getting help

Topics:

- [Contacting Dell](#)

Contacting Dell

Prerequisites

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

About this task

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

Steps

1. Go to **Dell.com/support**.
2. Select your support category.
3. Verify your country or region in the **Choose a Country/Region** drop-down list at the bottom of the page.
4. Select the appropriate service or support link based on your need.